



CHANGES

Move Audio In moved from A10 to A2
 Moved Over/Under LEDs to pins 3 and 4
 Disconnect A14 and run DAC out to 3.2 A14
 Add connection to Pin 8/T06 for Rate Switch

Adapter to replace Teensy 3.2 with Teensy 4.0 in clee Bits module

Sheet: /	
File: Teensy Adapter.sch	
Title: Bits Teensy adapter	
Size: A4	Date: 10/16/24
KiCad E.D.A. kicad (5.1.2-1)-1	Rev: Id: 1/1